


PSC Quick Start Guide - Pronto Managed Services Platform



Introduction

Installation of a Pronto Service Controller (PSC) at a WiFi location.

1. Connect a Laptop / PC to the LAN port of the PSC using a crossover Ethernet cable as shown in the figure below.

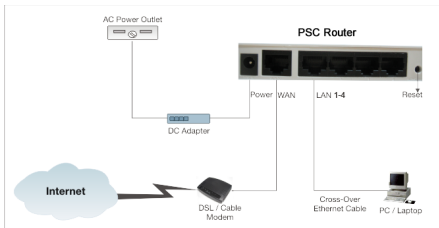

2. Connect the WAN port on the PSC to the Internet connection from your ISP.
3. Plug the AC power cord into the slot provided at the rear of the PSC and turn ON the power.
4. Ensure that the link LEDs are blinking on both the LAN port of the PSC and the PC's Ethernet interface.
5. Check that the PC / Laptop is able to obtain an IP address from the PSC using IPCONFIG at the command prompt. Under default settings, the PSC will supply a DHCP address in the 192.168.4.x subnet.
6. Launch a browser and verify that the PSC is redirecting the browser to the Login Page.
7. PSC can be configured in DHCP Static and PPOE mode. In this document the steps are been given to defined to put PSC in one of the modes.

Switching the PSC from DHCP to Static IP Mode

1. Launch any supported web browser and enable JavaScript (typically this is already enabled).
2. Enter `http://<ipaddress>/cgi-bin/webconfig` in the URL field and press Enter to view the opening screen of the WEBCONFIG tool.

Note: For a new PSC this address would be `http://192.168.4.1/cgi-bin/webconfig`

You can also obtain the gateway IP address using the `ipconfig` command from your laptop and use that to access the WEBCONFIG tool.

3. Provide the password and click Login to proceed. Password will be last 6 digit of the MAC ID + 1.
E.g. If the last 6 digit of the MAC ID is 11:12:a4 the password will be 11:12:a5
4. On successful login, the WEBCONFIG tool runs Diagnostics and displays the status of the PSC.
5. Click on INTERNET CONNECTIVITY CONFIGURATION and select the mode and provide the corresponding TCP/IP information.
6. Click Next to view the Webservice URL configuration screen, Make changes to the Webservice configuration if needed. Click Finish to accept the changes. This action will restart the PSC.

PSC comprises of 3 different Interfaces

1. **WAN Interface:** Connected to Internet through Cable/DSL modem /Router.
2. **WLAN Interface:** Broadcasts an SSID that end-users can connect to, using the wireless connection on their laptop. The default IP address range is 192.168.3.1. Once the laptop is connected to the SSID and the PSC assigns a IP address, launch an Internet browser to see the Login page.
3. **LAN Interface:** There are 4 LAN Ports in the PSC with default IP of 192.168.4.x. A laptop can be connected directly through a cross over cable to any of the LAN ports of the PSC and once the laptop gets a DHCP IP address, please launch an Internet browser to see the Login page.



For Installation or Configuration
issues contact:

Tel: 408 200 6810

Email: wispsupport@prontonetworks.com

Working Hours:

Monday to Friday

between 7 am to 3 pm PDT